

IG2 RELAY

ON-VEHICLE INSPECTION

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

- 2. REMOVE IG2 RELAY
 - (a) Remove the engine room No. 1 relay block cover.
 - (b) Remove the IG2 relay from the engine room No. 1 relay block.

- 3. INSPECT IG2 RELAY
 - (a) Measure the resistance of the IG2 relay.
Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

- 4. INSTALL IG2 RELAY
- 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

ES

